

How to Set Up and Use West Central TV on an Apple Device



My Apple Account:

Username: _____

Password: _____

Wi-Fi Network:

SSID: _____

Password: _____

Using Your Apple Remote:

- Use the outer ring on the remote to navigate **TOP**, **BOTTOM**, **LEFT**, and **RIGHT** within your Apple device.
- Press the center of the ring to **SELECT** an item.
- To return to the Apple TV Home screen, press the **TV/Control Center** button.
- Use the **BACK** button to go back to the previous screen.

Setting Up Your Apple Device:


1. Plug your Apple TV into power and connect it to your TV with an HDMI cable. Put batteries in your Apple remote.
2. Turn on your TV and switch to the correct HDMI input. Choose your language and turn Siri on (optional). Follow the on-screen instructions to connect to Wi-Fi and install updates.
3. Sign in with your Apple Account. To automatically add your Apple Account and Wi-Fi settings to your Apple TV, choose Set Up with iPhone. Then unlock your iPhone, hold it next to your Apple TV, and follow the onscreen steps on your iPhone and Apple TV.

Adding West Central TV to Your Apple Device:

1. From the home screen of the Apple device, navigate to **APP Store** by using the arrows on the Apple remote and press **OK** to open the store.
2. Use the on-screen keyboard to type in **West Central TV** and download it as you would any other App.

Accessing West Central TV on Your Apple:

1. On your Apple Home screen, look for the West Central TV app and use the arrow keys to highlight it.
2. Press **OK** to open the West Central TV app.
3. The first time you open the West Central TV app, you'll need to enter your West Central TV Initial Login and Passphrase. Contact our office if you haven't received these temporary credentials.

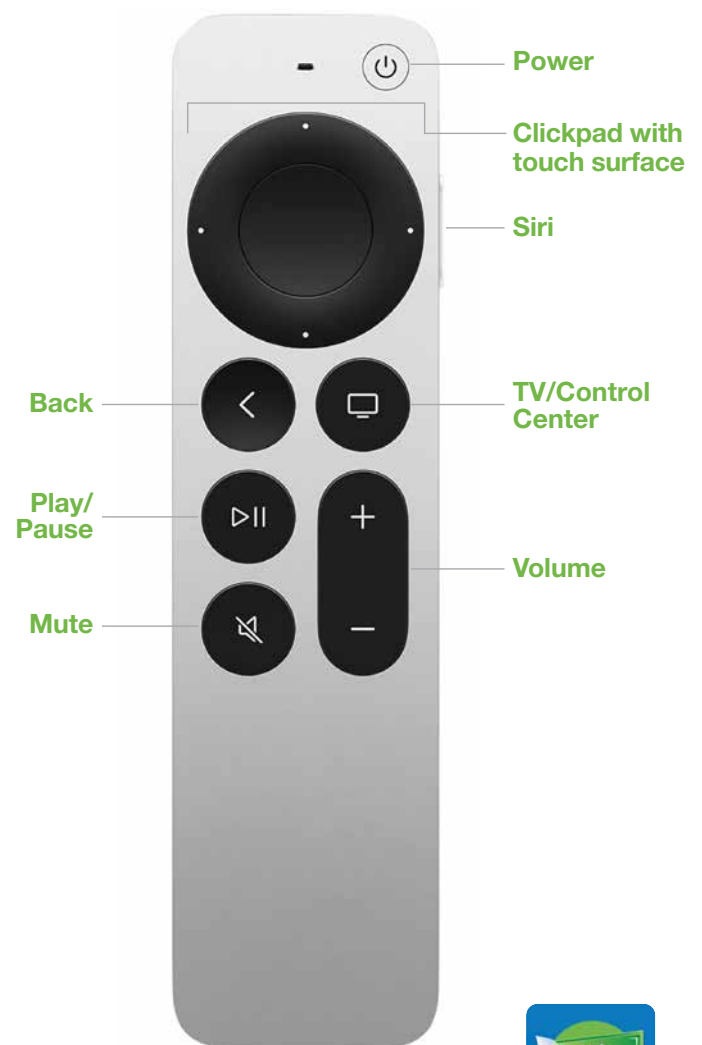

Voice Remote
(Apple Pro)



Login: _____

Passphrase: _____

Adding another device to your existing West Central TV subscription? See "Adding a New Device to Your West Central TV Subscription" on the back.



Watching West Central TV

Accessing the Program Guide:

- **From the Apple Home screen**, use your remote to highlight the West Central TV app and press **OK** on your remote.
- **From a currently airing program playing in the West Central TV app**, press the **BACK** button on your remote.

Navigating in the Program Guide and Watching a Channel:

1. Use the **UP** and **DOWN** arrows to scroll through the programs in the Program Guide.
2. Press the **PLAY/PAUSE** button to view the selected program. Or press **OK** on a highlighted program to see detailed information and management options including **Watch**, **Record** (see Making a Recording for more instructions), and **Search**.

Tab Bar: In the Program Guide, press the **BACK** button on your remote to open the Tab Bar. The Tab Bar provides access to **For You**, **Guide**, **Recordings**, **Search**, and **Settings** options.

Channel Surfing: While watching a currently airing program, use the **UP** or **DOWN** arrow on the remote to switch to the next higher or lower numbered channel.

Restart TV: To restart a program from the beginning, from the Program Guide, highlight a currently airing program and press the center of your remote ring. Press the top or bottom of your remote ring until you have highlighted **Start Over**, press the center of your remote ring and the program will Restart from the beginning. (Because of program restrictions, there may be programs that don't allow for the Restart function.)

Rewind, Fast Forward or Pause Live TV:

- Press the center of the remote ring to open your control options. Press the top of the remote ring to highlight the progress bar.
- To **REWIND**, tap the left side of the remote ring. To **FAST FORWARD**, tap the right side of the remote ring.
- Press **PLAY/PAUSE** to pause and resume live TV.

Quick Guide:

1. While watching a program, **SWIPE DOWN** on the center of your remote ring to pull down the menu list of your most recently watched channels.
2. Press **LEFT** or **RIGHT** on the remote ring to choose a new channel and press the **CENTER** of your remote ring to watch it.

Recordings

Making a Recording:

1. When you select the Record option, you'll be presented with three choices: **One Time Recording** for a one-time recording, **Series Rule (New Only)**, and **Series Rule (All Episodes)**.
2. Highlight your preferred option and press the **Center** of the remote ring to set the recording.

Accessing and Managing Recordings:

1. Navigate to the Tab Bar and select **Recordings** option.
2. You'll see four categories:

Current Recordings: Watch or delete current recordings.

Future Recordings and Upcoming Recordings: Manage settings for your future and upcoming recordings, including adjusting Start/Stop Recording times.

Series Rules: Manage series recordings. You can specify the number of episodes to keep and choose between All Episodes and Only New Episodes. Adjust Start/Stop Recording times as needed.

3. To navigate between each category, use the arrows on the remote.

Search

Accessing the Search Feature:

1. Navigate to the Tab Bar and select **Search**.
2. Type the name of a program by entering the first few letters.
3. Highlight a program and press **OK** on your remote.
4. If it's a currently airing program, you can highlight **Watch** and press **OK** on your remote. Or you have the option to select **Record** to add it to your future recordings.

(Recordings are deleted after 180 days unless you choose **Protect: YES** for the recording.)

Settings

Adding a New Device to Your West Central TV Subscription:

(You can have up to 20 devices on your account.)

1. Go to the **Settings** option in the Tab Bar.
2. Scroll down using the **DOWN** arrow on your remote and highlight **Manage Account**.
3. Navigate to **Add Device**.
4. Press **OK** on your remote to generate a Login and Passphrase for the new device.
5. Follow the instructions under Access West Central TV to add West Central TV to your new Apple using the provided credentials.